

Bill Redirect Send AWID proximity cards number directly in your existing application software



Documentation: 24/02/2013

Use this documentation with the product : Bill Redirect 5.0J and more

Awid proximity reader Software: <u>http://www.billproduction.com/Wedge_Keyboard_Serial_RS232_Barcode_Scanner/INDEX.HTML</u>

Email: info@BillProduction.com

This documentation demonstrate how send AWID proximity cards number directly in your existing application software



The following instructions apply to all of AWID's proximity readers.

Step #1

Download and install Bill Redirect software http://www.billproduction.com/Bill_COMtoKB.ZIP



	Step #3	
Bill Redirect Serial/File/TCP Port and Ke		
Password Corder now	Programmer: Steve Request: info@billproduction.com About me: @www.BillProduction.com	Minimze to
Password	Plugin Virtual Keyboard	🚫 Update
Debugger		
Manuals		TOPIP
Register	Serial Port Configuration	Communication
Click Here Ort	al Port Number	
Configuration 9600	Configuration: ASCII Failing Stable StopBits Timeout ETX	
Under HandShaki		Keyboard Buffer
	zation 0 second(s) 2 ©DSR Action(s) 2 OK	Configuration
		Pressed key
	Save Configuration	
Clic	k on button: Configuration	.
Enter the Serial Port N	umber where your AWID	reader is connected.
S	erial Port Configuration:	
Bauds: 9600 Parity	: None Databits: 8 StopBits	: 1 Timeout: <mark>.2</mark>


Step #4



Click on button: Configuration

Bill Redirect Serial/File/TCP P	Programmer:	Steve	n#n i	201	Minimze to
Order now		<u>Dillproduction.com</u> <u>www.BillProduction.com</u>	Bill Production	Softwares 🏹	Minimze to Tray Icon
Password	🗆 Plugin		tual board		Ipdate
Debugger					
📜 Manuals					
Register	Data f	Data Filtering Configuration		Communication	
Serial Port	Prefix:	Sufix:	ASCII		
	Search	📃 🖉 Replace by 🚱	to remove		
Configuration	(SERIAL_RX)	{CNV_AWID[RX_DATA,1]}	13 10	Keybe	oard
File (Read Mode)	Q				
				Presse	d key
			ОК	OnOff	


Click on button: Add

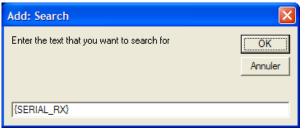

Enter in this field: {SERIAL_RX}


Edit: Replace by	
Enter the replacement text and or command(s)	OK Annuler
(CNV_AWID[RX_DATA,1])	
r in this field: {CNV_AWID	RX DAT

To only receive the 5 digits number without the facility code use this syntax: {CNV_AWID[RX_DATA,0]}

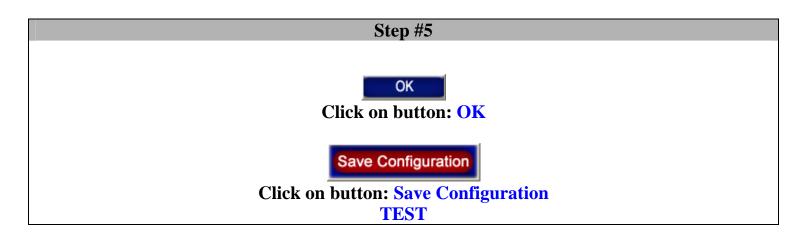

To send AWID proximity cards number directly in a field of another software and click on a button, use the command TX_FIELD and CLICK_BUTTON commands.

Example At Step #4:

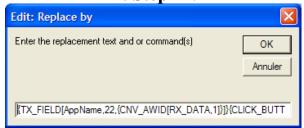

{TX_FIELD[AppName,22,{CNV_AWID[RX_DATA,1]}]}{CLICK_BUTTON[AppName,131]}

For more information, consult the product manual: http://www.billproduction.com/Bill_Redirect_Manual.pdf

